

Installation Instructions for 60724 Quick Release Steering Hub

NOTE: THESE KITS ARE DESIGNED FOR USE ON OFF-ROAD PERFORMANCE VEHICLES ONLY. THEY ARE NOT LEGAL FOR STREET USE.

OPERATION

This unit has a positive locking feature which requires that the outside slip ring be pulled up when initially installing over the inner splined core on the shaft. To install, pull up on the outer slip ring with unit started onto the splines, then release the slip ring while pushing down over the splined core and the unit will lock on. Simply reverse the procedure for removal.

INSTALLATION

1. On splined shafts, install the serrated inner splined core onto a lightly lubricated shaft. Loc-tite™ threads on nut and torque to a **maximum** of 5 ft/lbs. **DO NOT EXCEED.**
2. Mount steering wheel to quick release hub using the supplied bolts and washers. Loc-tite™ threads and tighten to 10-12 ft/lbs. **DO NOT EXCEED.**

WARNING! Keep hub free of dirt and the unit cleaned and lubricated regularly.



1-800-345-4545 jeps.com