

Installation Instructions for 80610 Ford Power Steering Pump Pulley Installer

Installer prevents damage to pump by exerting force only through the shaft

1. Place pulley over center screw.
2. Turn center screw into threads in pulley shaft.
3. Turn drive nut to press pulley onto shaft.
4. Remove center screw from pulley shaft.

