


**Installation Instructions for 50602**  
**SB-Chevy Mid-Mount Alternator Kit**  
 For Alternators: 555-10170, 358-2025 & 358-2026

Description	QTY	Without Motorplate		With Motorplate	
		10170	2025/2026	10170	2025/2026
Bracket - Alt Mount - SBC Mid - LH	1	X	X	X	X
Spacer - 2.310"	2			A	A
Spacer - .580"	1	B		B	
Spacer - .700"	1		C		C
Spacer - .460"	2	D	D		
3/8"-16 x 1-3/4" Bolt	2	E	E		
3/8"-16 x 4" Bolt	2			F	F
3/8"-16 x 2-1/2" Bolt	1	X	X	X	X
M8 x 35 Bolt	1	X	X	X	X
3/8" Flat Washers	1	X	X	X	X
3/8" Lock Washers	3	X	X	X	X
5/16" Flat Washers	1	X	X	X	X
M8 Nut	1	X	X	X	X
3/8" Nut	1	X	X	X	X

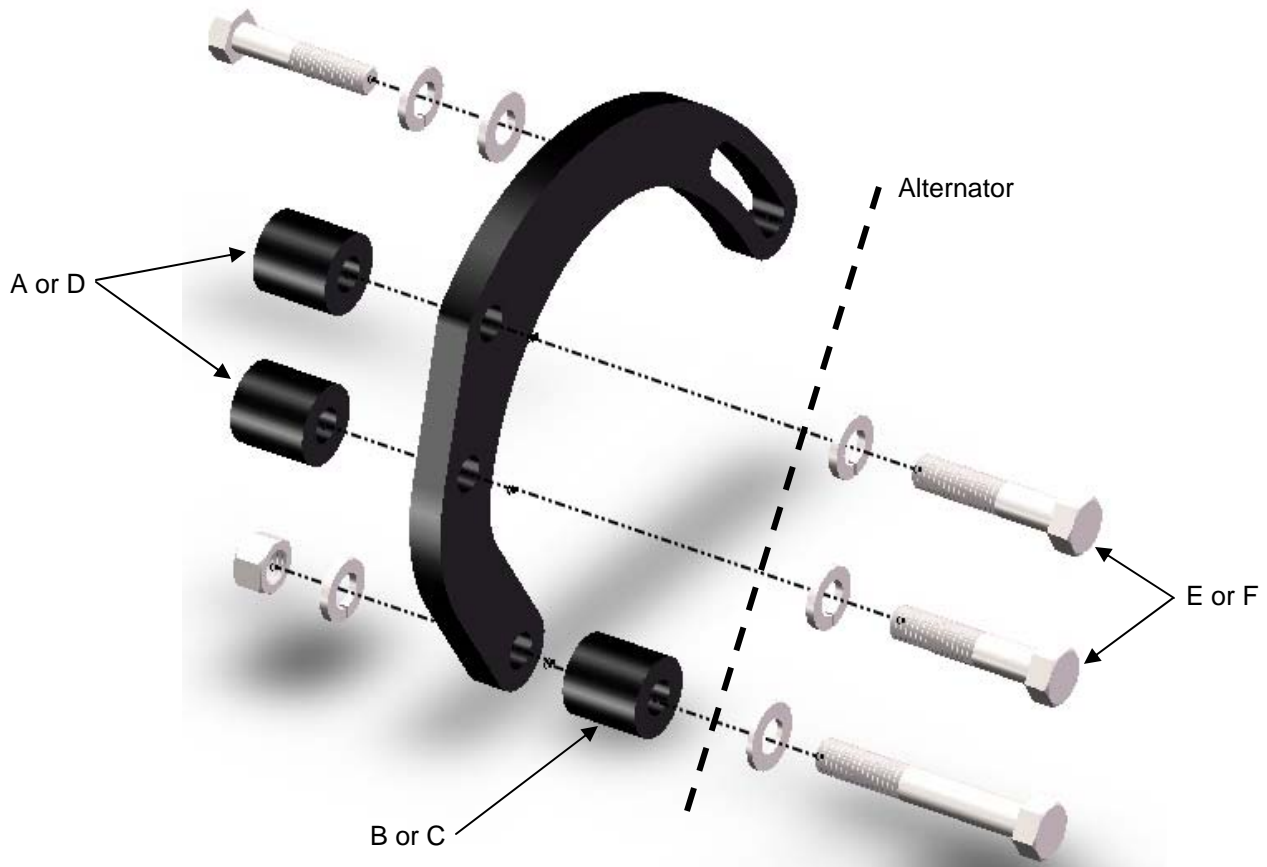

1-800-345-4545 [jegs.com](http://jegs.com)