



## INSTALLATION INSTRUCTIONS for 70605 on 70601 HEATER

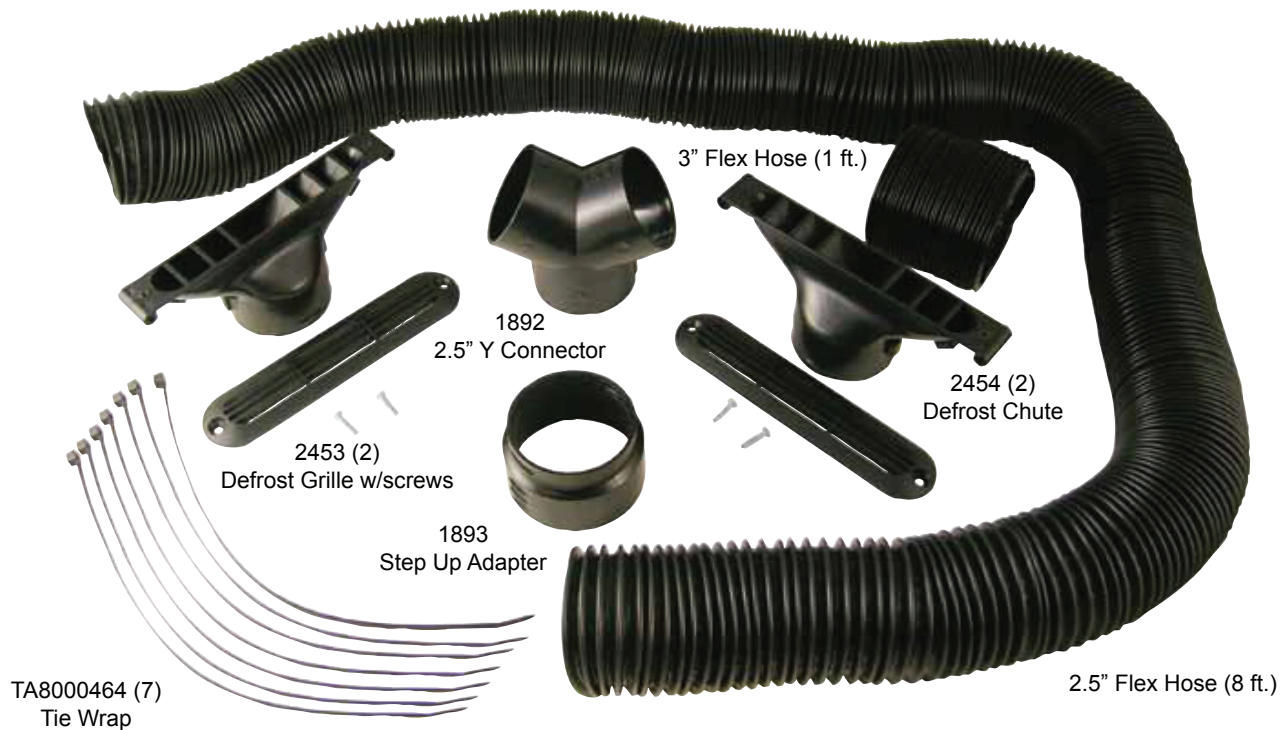

1. Attach 1 ft. 3" Flex Hose to Heater Outlet with Tie Wrap (TA8000464). Other Outlet can remain uncovered for floor heat (or attach Louver Kit 70606).
2. Attach 3" step up adapter (1893) to 3" flex hose with tie wrap (TA8000464).
3. Attach 2.5" Y Connector (1892) to Step Up Adapter (1893). (align hose barb to hole cuts for snap fit, electrical tape may be used to seal)
4. Cut 2.5" Flex Hose (8 ft.) accordingly and attach to 2.5" Y Connector (1892) with Tie Wraps (TA8000464) (2 times).
5. Attach Defrost Grille (2453) to Defrost Chute (2454) with Screws (2 times).
6. Attach Defrost Chute (2454) to 2.5" Flex Hose with Tie Wrap (TA8000464) (2 times).

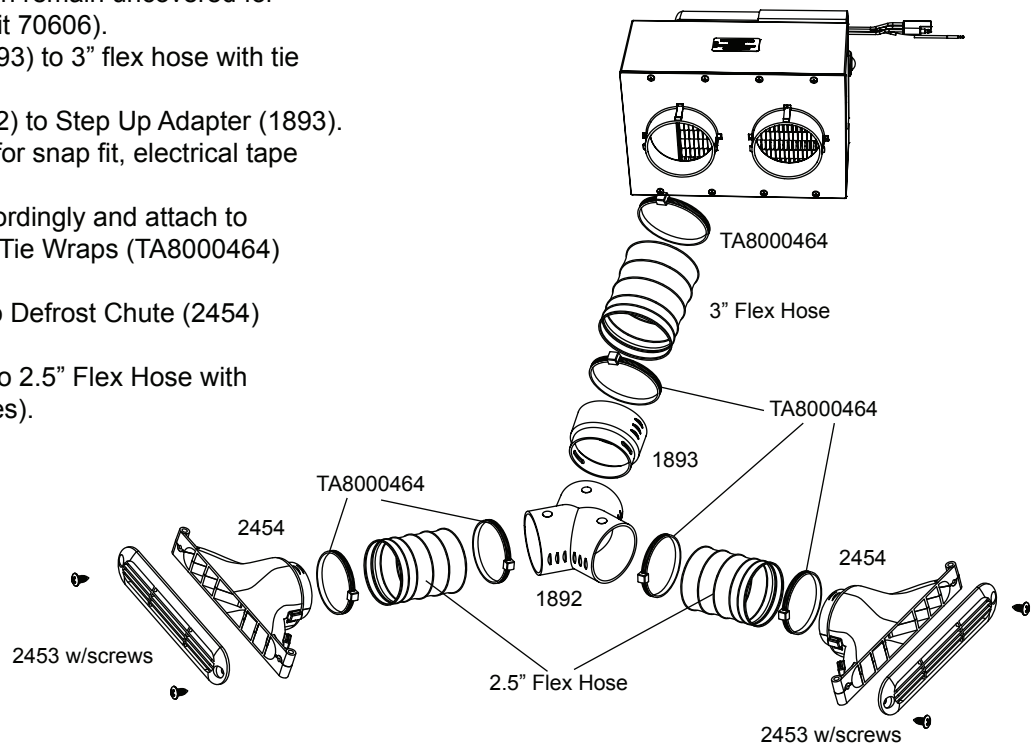

1-800-345-4545

JEGS.COM